


## SINGLE ROW ZZ BALL BEARING

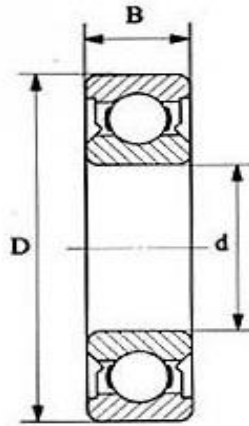

SR.NO.	BEARING NO.	d	D	B
1	623 ZZ	3	10	4
2	624 ZZ	4	13	5
3	625 ZZ	5	16	5
4	685 ZZ	5	11	5
5	686 ZZ	6	13	5
6	696 ZZ	6	15	5
7	626 ZZ	6	19	6
8	688 ZZ	8	16	5
9	698 ZZ	8	19	6
10	608 ZZ	8	22	7
11	628 ZZ	8	24	8
12	6900 ZZ	10	22	6
13	6000 ZZ	10	26	8
14	6200 ZZ	10	30	9
15	6901 ZZ	12	24	6
16	6902 ZZ	15	28	7