


ArduCam

Camera Module for Raspberry Pi

SKU:B0390

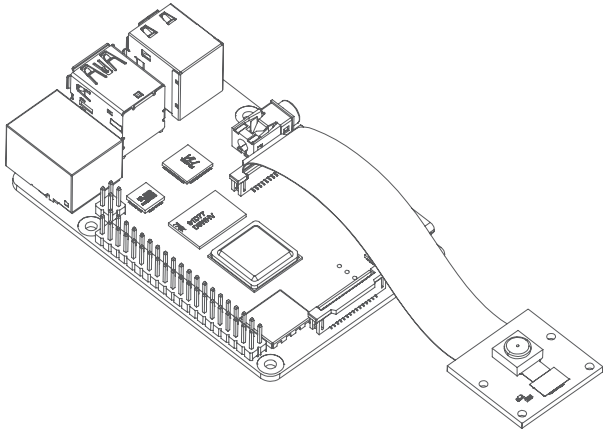

QUICK START

8MP IMX219 Stock Lens Fixed Focus


SPECS

Size	25 × 24 × 9 mm
Weight	3g
Still resolution	8 Megapixels
Frame rate	30fps@1080P, 60fps@720P, VGA90 video modes.
Sensor	Sony IMX219
Sensor resolution	3280 × 2464 pixels
Sensor image area	3.68 x 2.76 mm (4.6 mm diagonal)
Pixel size	1.12 μm x 1.12 μm
Optical size	1/4"
Focal length	3.04 mm
Horizontal field of view	62.2 degrees
Vertical field of view	48.8 degrees
Focal ratio (F-Stop)	2.0

COPYRIGHT

Specifications are subject to change without notice. No part of the specifications may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from Arducam. All rights reserved.

MECHANICAL DRAWING

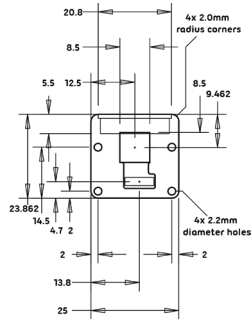

CONNECT THE CAMERA

You need to connect the camera module to the Raspberry Pi's camera port.

1. Locate the camera port near the USB C power connector, and gently pull up on the plastic edge.
2. Push in the camera ribbon and make sure the silver connector is facing the Raspberry Pi camera MIPI port. Do not bend the flex cable and make sure it is firmly inserted.
3. Push the plastic connector down while holding the flex cable until the connector is back in place.

SOFTWARE SETTING

Please make sure you are running the latest version of Raspberry Pi OS. (January 28th 2022 or later releases, Debian version: 11 (bullseye)).

For Raspbian Bullseye users, please do the following:

1. Edit the configuration file: `sudo nano /boot/config.txt`
2. Find the line: `camera_auto_detect=1`, update it to:
`camera_auto_detect=0`
`dtoverlay=imx219`
3. Save and reboot.

For Bullseye users running on Pi 0-3, please also:

1. Open a terminal
2. Run `sudo raspi-config`
3. Navigate to Advanced Options
4. Enable Glamor graphic acceleration
5. Reboot your Pi.

Operating The Camera

libcamera-still is an advanced command line tool for capturing still images with the IMX219 Camera Module.

`libcamera-still -t 5000 -o test.jpg`

This command will give you a live preview of the camera module, and after 5 seconds, the camera will capture a single still image. The image will be stored in your home folder and named test.jpg.

`-t 5000`: Live preview for 5 seconds.

`-o test.jpg`: take a picture after the preview is over and save it as test.jpg

If you only want to see the live preview, use the following command:

`libcamera-still -t 0`

Please Note:

This camera module supports the latest Raspberry Pi OS Bullseye (released on Jan 28th, 2022) and libcamera apps, not for the previous Raspberry Pi OS (Legacy) users.

FURTHER INFORMATION

For further information, check the following link:

<https://www.arducam.com/docs/cameras-for-raspberry-pi/raspberry-pi-libcamera-guide/>

CONTACT US

Email: support@arducam.com

Forum: <https://www.arducam.com/forums/>

Skype: arducam